

Odin FX

CKU-1060

USER MANUAL

Table of Contents

INTRODUCTION.....	3
SAFETY	3
SERVICE & SUPPORT	3
DISPLAY OPERATION.....	4
MENU GUIDE	5
DMX VALUES.....	5
SETUP & CONNECTIONS	6
TROUBLESHOOTING	6
TECHNICAL INFORMATION	7

Please read these instructions carefully before use. Operating this fixture according to these instructions is important to avoid any possible damage or accidents caused by misuse.

Introduction

Package Contents

- Odin FX
- Power Cord
- User Manual

Safety

Caution! Opening this unit voids warranty. Contact ColorKey for any service requests.

Warning! To avoid electrical shock, be sure to disconnect power before any service or when moving or setting up the fixture.

Caution! Avoid direct eye exposure with the fixture when on.


- This fixture is for indoor use only.
- This fixture must be installed a minimum distance of 5 meters (16'4") away from any lighted objects.
- Do not install or operate this fixture near flammable materials.
- This device must be installed, operated, and maintained by a qualified professional.
- Please check if the voltage is in accordance with the rated power before installing.
- Do not operate this fixture if the power cord has been damaged. Turn off fixture and replace with a power cord of similar rating.

Service & Support

Your ColorKey product includes a 1-year warranty. For technical support or to register your product, please visit <https://www.colorkeyled.com/support/>

You can also reach us by phone Monday thru Friday, 8:30am – 5pm PST at (818) 578-4030.

Display Operation

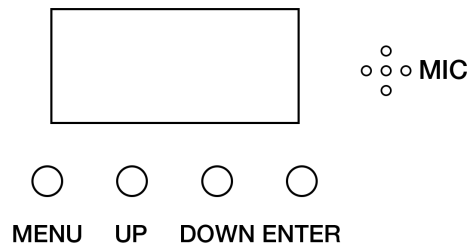

- MENU: Access the menu/Scroll through menu options
- UP: Scroll through menu selection or increase parameter
- DOWN: Scroll through menu selection or parameters decrease
- ENTER: Open/Select the current menu option

Menu Guide

Menu Item	Values	Function
A001	1-512	Set DMX Address (001 to 512)
A1	1-9	Red, Slow to Fast
A2	1-9	Green, Slow to Fast
A3	1-9	Blue, Slow to Fast
A4	1-9	White, Slow to Fast
A5	1-9	Color Change
A6	1-9	Multi-Color Change
A7	1-9	Multi-Color Fade
A8	1-9	Strobe, Slow to Fast
S1	1-9	Sound, Slow to Fast
S2	1-9	Sound, Multi-Color Slow to Fast

DMX Values


8 channels mode

CH	Value	Function
1	0-255	Dimmer
2	0-255	Red
3	0-255	Green
4	0-255	Blue
5	0-255	White
6	0-255	Strobe
7	0-255	Motor Rotation
8	3-255	Auto Programs

Setup & Connections

① Wired DMX Cable Connections

Use a DMX to cable to connect to the in/out sockets on the bottom of the light for use with a cabled connection for DMX 512 control.

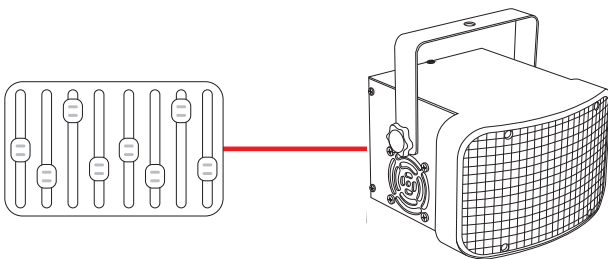

Troubleshooting

Problem	Solutions
No DMX control	<ul style="list-style-type: none">• Confirm cable is connected securely to both fixture and controller• Confirm fixture is in DMX mode set to Menu setting (A0)
Fixture does not respond to sound	<ul style="list-style-type: none">• Make sure the fixture is in Sound Active mode (S1) (S2)

Technical Information

- 2x10W RGBW 4-in-1 CREE LEDs
- DMX Channel Modes: 8 channels
- Control modes: DMX 512, Sound Active, Stand Alone
- Lamp rated life: >50000 Hours
- Working temperature: up to 40°C
- Power consumption: 30W
- Power supply: AC220-240V;50-60Hz
- Product size: 7.1 x 6.1 x 5.8 in
- Net Weight: 3.1lbs

Please note: As we continue to work towards improving our products and your experience as a user, we recommend that you check our website periodically for updates to user manuals and specifications at www.ColorKeyLED.com or you may contact us directly at info@colorkeyled.com.