
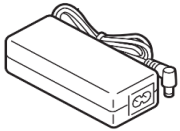 

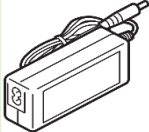 

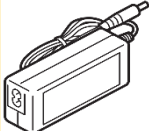 


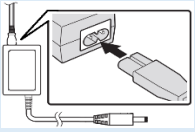 




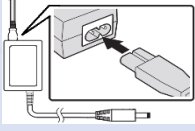 


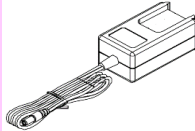 


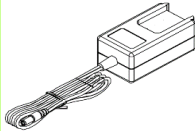 
 



Pioneer DJ devices - Reference list for AC adapters

power output	partnumbers (from old to new)	supplied model	illustrations / pictures
	12V - 2A + power cord DWR15 67 → DWR15 71 → DWR15 76	DDJ-800 DDJ-SR2 DJM-250Mk2 DJM-450	  <p>DWR1567</p>
	12V - 2A + power cord DWR15 22 → DWR15 23 → DWR15 24 → DWR15 46 → DWR15 51 → DWR15 72 → DWR15 78	DDJ-RR XDJ-700	  <p>DWR1546</p>
	12V - 3A + power cord DWR15 53 → DWR15 69 → DWR15 74 → DWR15 77	DDJ-1000 DDJ-1000SRT TSP-16 XDJ-RR	  <p>DWR1553</p>
	5V - 2A + power cord DWR15 07 → DWR15 25 → DWR15 26 → DWR15 42 DWR15 50 → DWR15 73 <i>*cfr service information SPH19001 (regulations update)</i>	RMX-500 (original) RMX-1000	     <p>DWR1526 DWR1542 DWR1550 DWR1526</p>
	5V - 2A + power cord DWR15 58 → DWR15 70 <i>*cfr service information SPH19001 (regulations update)</i>	INTERFACE 2 RMX-500 (running ch TAS-1	   <p>DWR1558 DWR1558</p>
	5V - 3A + power plug 411- DJM250-842-HA → 411- S1-879-HA	DDJ-SX DJM-250	   <p>411-DJM250-842-HA 411-DJM250-842-HA</p>
	5V - 3A + power plug 411-S1MK2- 930 → 411-S1MK2- 930B → 411-SXMK3- 957 → 411-SXMK3- 957A → 411-SXMK3- 957B → 411-SXMK3- 957C → 411-SXMK3- 957D <i>*cfr service information SPH18018 (safety regulation update)</i>	DDJ-SX2 DDJ-SX3 DDJ-RX DDJ-SX2-N	   <p>411-S1MK2-930 411-S1MK2-930</p>