



# Compact Lightset MKII

ORDERCODE 30272



**SHOWELECTRONICS FOR PROFESSIONALS**

## **Congratulations!**

You have bought a great, innovative product from Showtec.

The Showtec Compact Lightset brings excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product provides the effect you need.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: [iwant@showtec.info](mailto:iwant@showtec.info)

You can get some of the best quality, best priced products on the market from Showtec.

So next time, turn to Showtec for more great lighting equipment.

Always get the best -- with Showtec !

Thank you!



<b>Warning</b> .....	2
Safety Instructions .....	2
Operating Determinations .....	4
Rigging .....	4
Return Procedure .....	5
Claims.....	5
<b>Description of the device</b> .....	6
Features .....	6
Overview .....	7
<b>Installation</b> .....	7
<b>Set Up and Operation</b> .....	8
Control Modes .....	8
One Compact Lightset (Built-in Programs, Auto Run, Static Color) .....	8
One Compact Lightset (Sound-control) .....	8
Multiple Compact Lightsets (Master/Slave control) .....	8
Multiple Compact Lightsets (DMX Control) .....	9
Fixture Linking .....	10
Data Cabling .....	10
Control Panel.....	11
Control Mode .....	11
DMX Addressing .....	11
Menu Overview .....	12
Main Menu Options .....	13
1. Auto Run Program.....	13
2. DMX Mode .....	13
3. Slave Mode .....	14
4. Sound control Mode.....	14
5. Static Color Mode .....	14
6. Built-in Programs .....	14
7. Footswitch Function (footswitch (30267) not included !) .....	15
DMX Channels .....	16
3 Channels.....	16
4 Channels.....	16
8 Channels.....	16
14 Channels.....	17
2 Channels.....	18
15 Channels.....	19
7 Channels.....	20
<b>Maintenance</b> .....	21
Replacing a Fuse .....	21
<b>Troubleshooting</b> .....	21
No Light .....	21
No Response to DMX.....	22
<b>Product Specification</b> .....	23

## Warning

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY  
BEFORE YOUR INITIAL START-UP!**

## Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

### Your shipment includes:

- Showtec Compact Lightset
- Stand and carrying bag incl.
- IEC powercable 5m
- User manual



## LED Expected Lifespan

LEDs gradually decline in brightness over time. HEAT is the dominant factor that leads to the acceleration of this decline. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal or singular optimum conditions. For this reason when all color LEDs are used at their fullest intensity, life of the LEDs is significantly reduced. It is estimated that a viable lifespan of 40,000 to 50,000 hours will be achieved under normal operational conditions. If improving on this lifespan expectancy is of a higher priority, place care in providing for lower operational temperatures. This may include climatic-environmental and the reduction of overall projection intensity.



### CAUTION!

**Keep this device away from rain and moisture!  
Unplug mains lead before opening the housing!**



## Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.  
With a dangerous voltage you can suffer  
a dangerous electric shock when touching the wires!**



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

## **IMPORTANT:**

*The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.*

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the device and do not modify the device.
- Never use anything to cover the ground contact.
- Never leave the device run without a lamp!
- Never look directly into the light source.
- Never leave any cables lying around.
- Do not insert objects into air vents.
- Do not connect this device to a dimmerpack.
- Do not switch the device on and off in short intervals, as this would reduce the device's life.
- Do not shake the device. Avoid brute force when installing or operating the device. The Compact Lightset reacts very sensitive to movement.
- Never use the device during thunderstorms, unplug the device immediately.
- Only use device indoor, avoid contact with water or other liquids.
- Do not touch the device's housing bare-handed during its operation (housing becomes hot).
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Only install the device with the hanging-bracket.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If the lens or glass is obviously damaged, it has to be replaced. So that its functions are not impaired, due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Lighteffect must be installed out of the reach of children. Never leave the unit running unattended.
- For replacement use fuses of same type and rating only.
- Allow time to cool down, before replacing lamp.
- The user is responsible for correct positioning and operating of the Compact Lightset. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



**CAUTION ! EYEDAMAGES !**  
**Avoid looking directly into the light source.**  
**(meant especially for epileptics) !**



## Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light-output and the illuminated surface must be more than 0.5 meter.
- The maximum ambient temperature  $t_a = 45^\circ\text{C}$  must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of  $35^\circ\text{C}$ .
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash, etc.

*You endanger your own safety and the safety of others!*

## Rigging

*Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.*

*Do not attempt the installation yourself !*

*Always let the installation be carried out by an authorized dealer !*

## Procedure:


- If the Compact Lightset is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the Compact Lightset, with the mounting-bracket, to the trussing system.
- The Compact Lightset must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the device, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

*Improper installation can cause serious damage to people and property !*

## Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NUL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!



## **Return Procedure**

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail [aftersales@highlite.nl](mailto:aftersales@highlite.nl) and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

**Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:**

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) A brief description of the symptoms

## **Claims**

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

## Description of the device

### Features

The Showtec Compact Lightset is a light effect with high output and great effects.

- Voltage: 100~240VAC 50/60Hz
- Power Consumption: 51W@110V, 52W@240V
- Current : 0.72A@110V, 0.35A@240V
- Fuse: 1.5A/125V@110V, 1A/250V@240V
- Lightsource: 432 LED's 10mm (144 Red, 144 Green, 144 Blue)
- Colour range: 16,7 million additive colors
- Dimmer: 0-100%
- Strobe: 0-20Hz
- Beam angle: 30 degree
- Ideal for musicians, bands and mobile DJ
- Plug & Play
- Stand and carrying bag included
- High power LED-effect
- Built-in programs
- DMX Control
- Music-controlled via built-in microphone
- Master/Slave function
- On Board: Display for easy Set Up
- Options : DMX512, Auto, Sound, Manual
- Variable in stand height 1560-2670mm
- Optional Footswitch with 5m cable (30267) **not included**
- Via optional Footswitch: (Auto run, Sound, Freeze, Blackout)
- Control: DMX / Music control / Auto Program / Master-slave
- Digital Addressing
- Stand-alone
- Working environment: -10~40 °C
- DMX channels: 3, 4, 8, 14, 2, 15, 7 CH
- Power linking: 5pcs@110V, 7pcs@240V
- IP Rating: IP-20
- Housing Spot: Flame Retardent Plastic (V0)
- Housing T-bar: Metal, black coated
- Connections: IEC IN/OUT + XLR 3 pole IN/OUT
- Cooling: Convection
- Weight: 10 kg
- Lux @2m: 1000+ (1 spot)
- Max distance: 10m
- Fuse 1A / 250V



## Overview

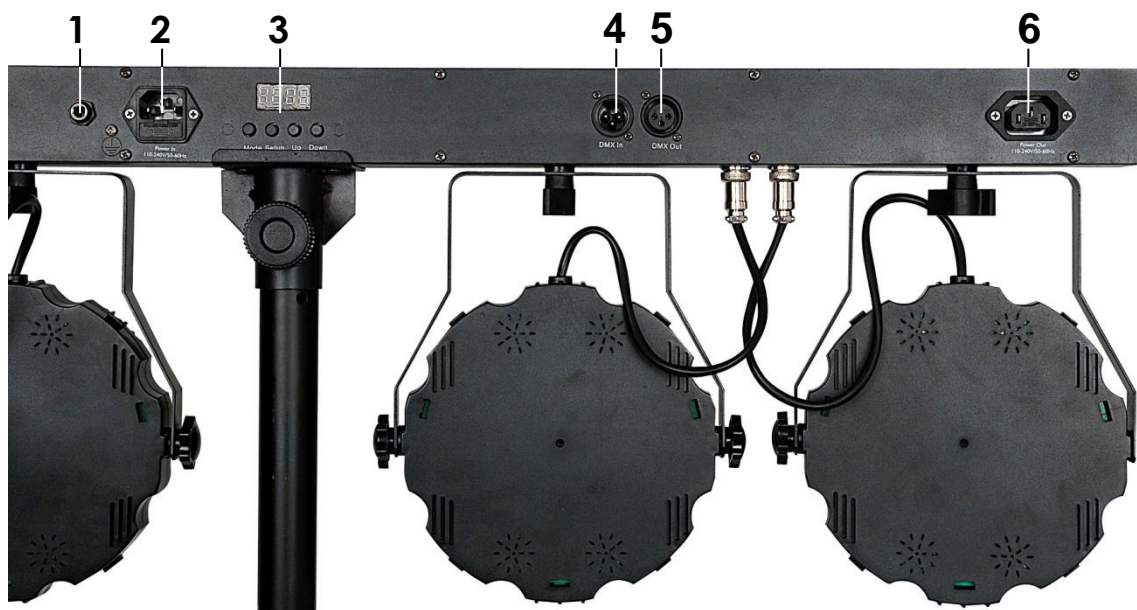


Fig. 1

- 1) Jack plug for external Foot controller (30267) **not included**
- 2) IEC power connector IN + Fuse 1 A 250V
- 3) LED Display with menu buttons

- 4) 3-pin DMX In
- 5) 3-pin DMX Out
- 6) IEC power connector OUT

## Installation

Remove all packing materials from the Compact Lightset. Check that all foam and plastic padding is removed. Connect all cables.

**Always disconnect from electric mains power supply before cleaning or servicing.  
Damages caused by non-observance are not subject to warranty.**

## Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Remove all packing materials from the Compact Lightset. Check that all foam and plastic padding is removed.

**Always disconnect from electric mains power supply before cleaning or servicing.**  
**Damages caused by non-observance are not subject to warranty.**

## Control Modes

There are 6 modes:

- Built-in Programs
- Auto Run
- Static Color
- Sound-controlled
- Master/Slave
- DMX512

### One Compact Lightset (Built-in Programs, Auto Run, Static Color)

1. Fasten the effect light onto firm trussing Leave at least 1 meter on all sides for air circulation.
2. Plug the end of the electric mains power cord into a proper electric power supply socket.
3. When the Compact Lightset is not connected by a DMX-cable, it functions as a stand-alone device. Please see page 13+14 for more information about the built-in programs.

### One Compact Lightset (Sound-control)

1. Fasten the effect light onto firm trussing Leave at least 1 meter on all sides for air circulation.
2. Plug the end of the electric mains power cord into a proper electric power supply socket.
3. Turn on the music. If device is set to **5000** (Audio) and you have pressed enter, then the fixture will react to the beat of the music. Please see page 13 for more information about the sound-control options.

### Multiple Compact Lightsets (Master/Slave control)

1. Fasten the effect light onto firm trussing Leave at least 1 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. Use a 3-p XLR cable to connect the Compact Lightset.

The pins:



1. Earth
2. Signal -
3. Signal +

4. Link the units as shown in (Fig. 2), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units. You can use the same functions on the master device as described on page 13+14 (Built-in Programs, Auto Run, Static Color or Music control). This means on the master device you can set your desired operation Mode and all slave devices will react the same as the master device.
5. Supply electric power: Plug electric mains power cords into each unit's IEC socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

### Multiple Compact Lightsets (Master/Slave control)



Fig. 2

## Multiple Compact Lightsets (DMX Control)

1. Fasten the effect light onto firm trussing Leave at least 1 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. Use a 3-p XLR cable to connect the Compact Lightsets and other devices.


### Occupation of the XLR-connection:

#### DMX-OUTPUT XLR mounting-socket:




- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

#### DMX-input XLR mounting-plug:

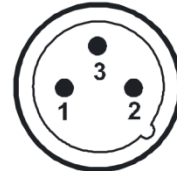

- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

The transformation of the controller line of 3 pins and 5 pins (plug and socket)

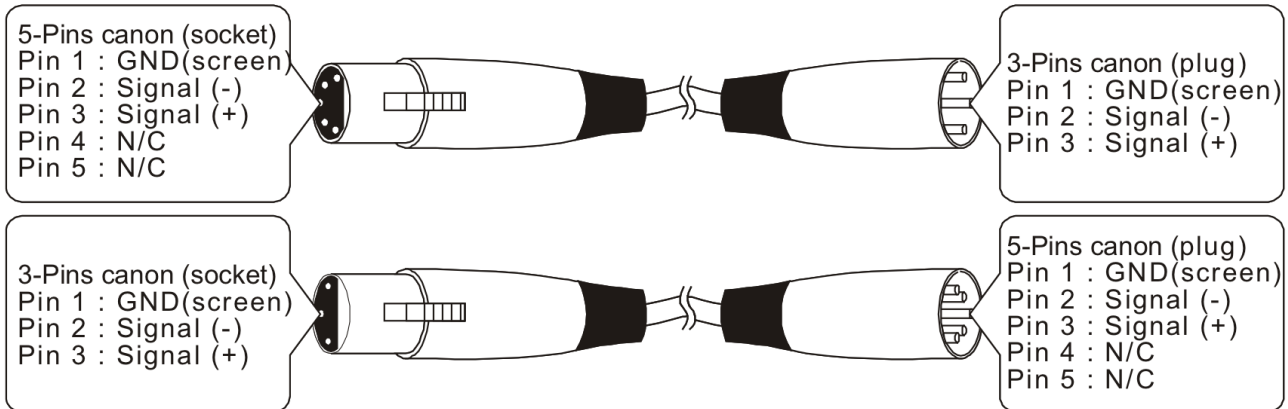

4. Link the units as shown in (figure 3), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
5. Supply electric power: Plug electric mains power cords into each unit's IEC socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

### Multiple Compact Lightsets DMX Set Up



Fig. 3

**Note : Link all cables before connecting electric power**

## Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

**Important:** Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.



Maximum recommended DMX data link distance: 100 meters

Maximum recommended number of Compact Lightsets on a DMX data link: 30 fixtures

Maximum recommended number of Compact Lightsets on a IEC power link: 5pcs@110V

Maximum recommended number of Compact Lightsets on a IEC power link: 7pcs@240V

## Data Cabling

To link fixtures together you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

### DAP Audio Certified DMX Data Cables

- DAP Audio Basic microphone cable for allround use. bal. XLR/M 3 p. > XLR/F 3 p.  
**Ordercode** FL01150 (1,5m.), FL013 (3m.), FL016 (6m.), FL0110 (10m.), FL0115 (15m.), FL0120 (20m.).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5m.), FL713 (3m.), FL716 (6m.), FL7110 (10m.).

The Compact Lightset can be operated with a controller in **control mode** or without the controller in **stand-alone mode**.

## Control Panel

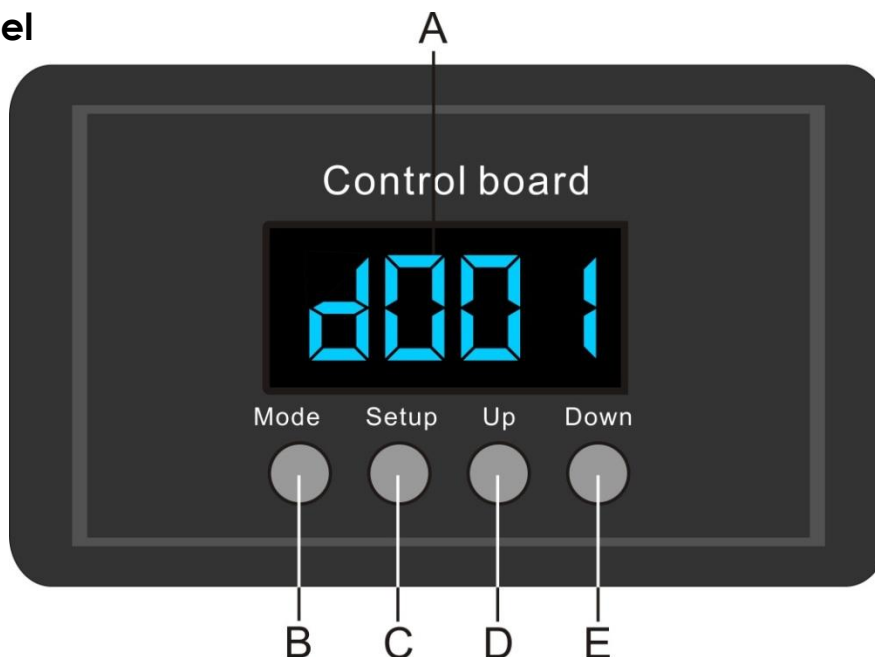


Fig. 4

- A. LCD Display
- B. CHOOSE button
- C. ENTER Button
- D. Up Button
- E. Down Button

## Control Mode

The fixtures are individually addressed    on a data-link and connected to the controller.

The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address the next time.)

## DMX Addressing

The control panel on the front side of the Compact Lightset allows you to assign the DMX fixture address, which is the first channel from which the Compact Lightset will respond to the controller.

Please note when you use the controller, the unit has **15** channels.

When using multiple Compact Lightsets, make sure you set the DMX addresses right.

Therefore, the DMX address of the first Compact Lightset should be **1(A001)**; the DMX address of the second Compact Lightset should be **1+15=16 (A016)**; the DMX address of the third Compact Lightset should be **16+15=31 (A011)**, etc. Please, be sure that you don't have any overlapping channels in order to control each Compact Lightset correctly.

If two or more Compact Lightsets are addressed similarly, they will work similarly.

For address settings, please refer to the instructions under "Addressing".

## Controlling:

After having addressed all Compact Lightset fixtures, you may now start operating these via your lighting controller.

**Note:** After switching on, the Compact Lightset will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "LED" on the control panel will not flash.

The problem may be:

- The XLR cable from the controller is not connected with the input of the Compact Lightset.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

**Note:** It's necessary to insert a XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.

# Menu Overview

1. Auto Program


2. DMX Address

3. Slave

4. Sound-controlled

5. Static Color

6. Built-in Programs

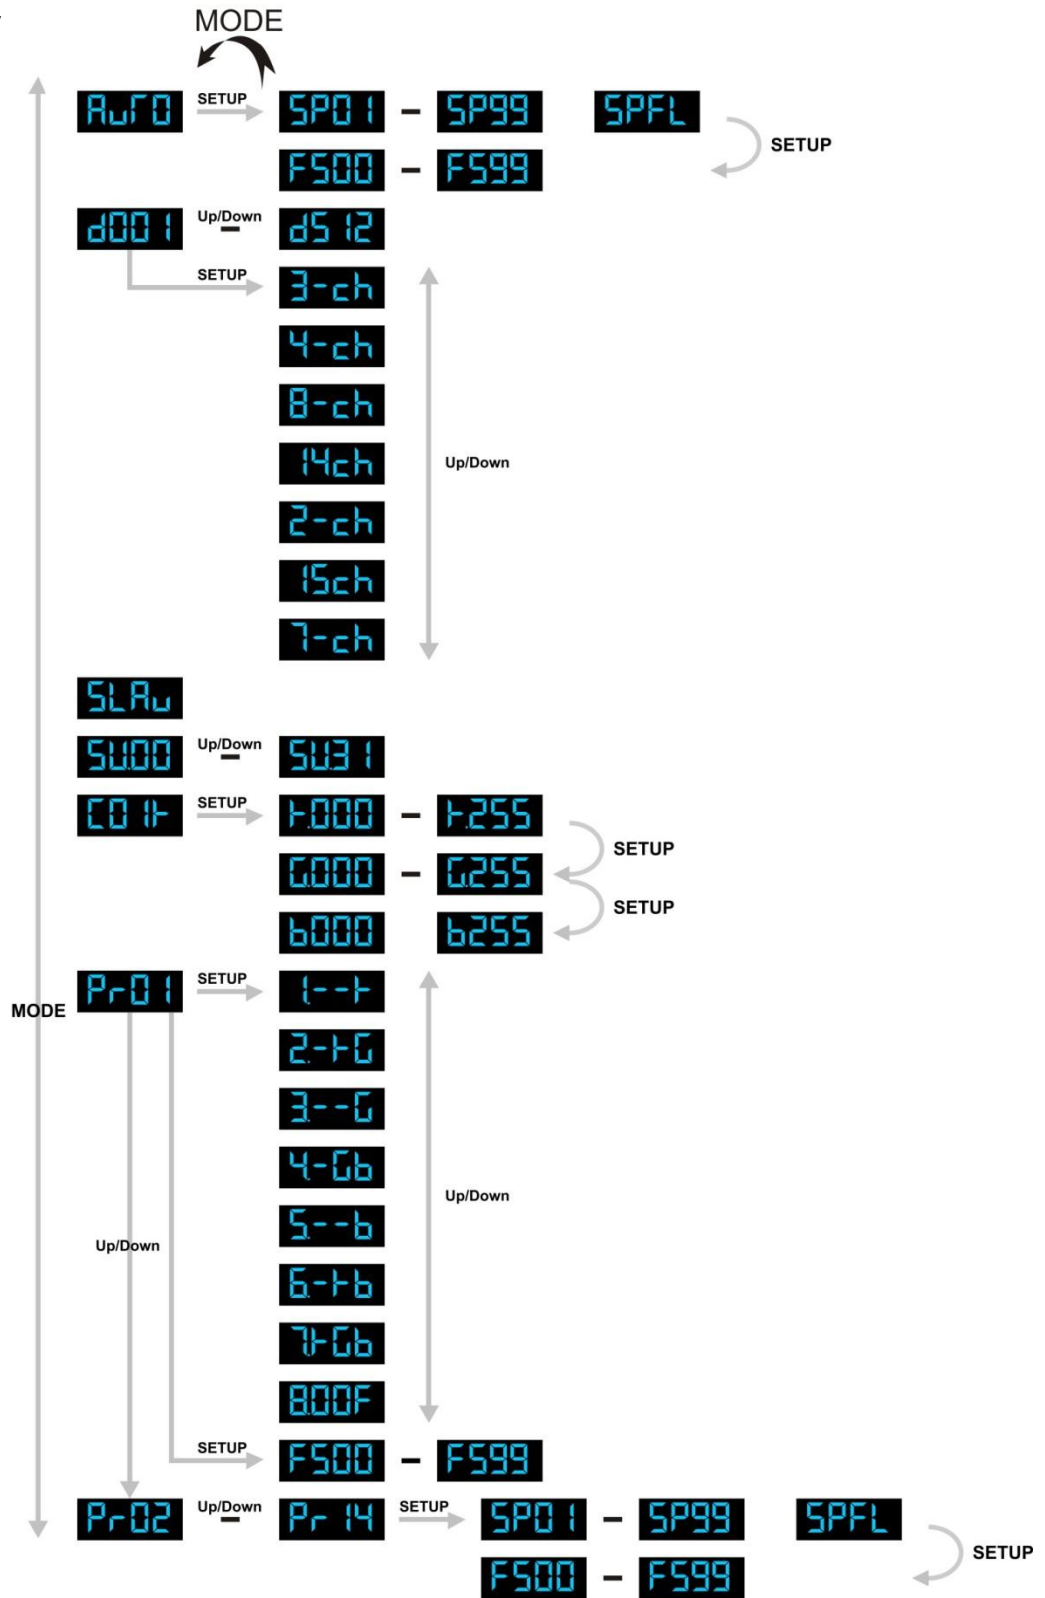

## Main Menu Options



### 1. Auto Run Program

- 1) Press the **MODE** button on the device, until the display shows **Auto**.
- 2) With this menu you can set the Auto Mode of the Compact Lightset.
- 3) Press **Setup** to enter the AUTO Menu. You can choose 2 different sub menus.



Use the **SETUP** button to scroll through the menu.

### 2. DMX Mode

With this menu you can set the DMX address.

- 1) Press the **MODE** button, until the display shows **d001**.
- 2) You can choose 512 different DMX addresses.  
Use the Up / Down buttons to select the required address from **d001** <sup>Up/Down</sup> **d512**.
- 3) You can also press the **SETUP** button to set a different DMX Mode.



### 3. Slave Mode

When the display shows : **SLAV** , the device is a slave device. It will now react the same as its master.

### 4. Sound control Mode

1) Press the **MODE** button on the device, until the display shows **SU00** . Turn on the music and the Compact Lightset will react to the beat of the music.

**SU00** - **SU31**




You can set the sensitivity from low-sensitivity to high-sensitivity between **SU.00** - **SU.31**.

### 5. Static Color Mode

With this menu you can set the DMX address.

1) Press the **MODE** button, until the display shows **CO 11** .

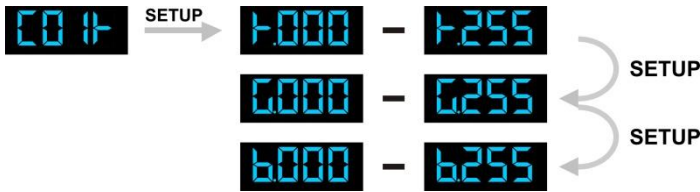

2) With this menu you can set 3 Static colors of the Compact Lightset. You can choose **Red**, **Green** or **Blue** by pressing the Setup button. Use the Up / Down buttons to select the values of each individual color from 000-255.

### 6. Built-in Programs

1) Press the **MODE** button on the device, until the display shows **Pr01** .

2) With this menu you can set the Built-in Program Mode of the Compact Lightset.

You can choose 14 built-in programs **Pr-01**  $\xrightarrow{\text{Up-Down}}$  **Pr-14** , by using the Up / Down buttons.

3) Press **Setup** to enter the built-in programs Menu. You can choose 2 different sub menus:


**Pr-01**

**Pr-02**  $\xrightarrow{\text{Up/Down}}$  **Pr-14**


See the next page to view the complete menu .



## 6. Built-in Programs

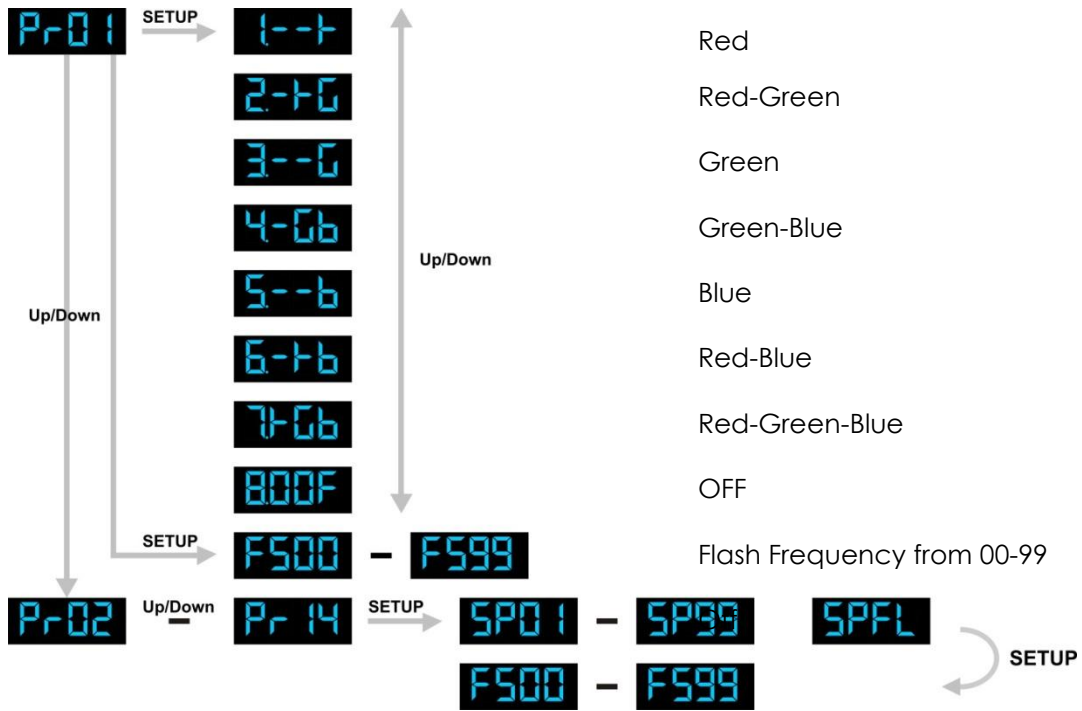

- 4) When you select **Pr-02** <sup>Up/Down</sup> **Pr-14**, you can press **ENTER** to switch between the built-in programs Menu.
- 5) You can choose 2 different sub menus.

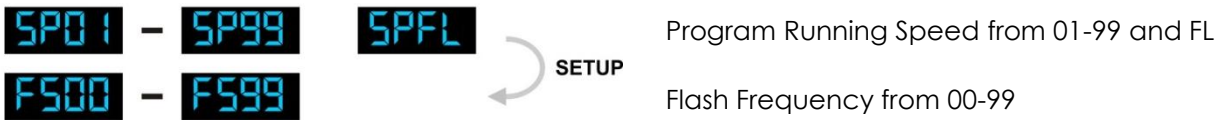

Use the **ENTER** button to scroll through the menu.

## 7. Footswitch Function (footswitch (30267) not included !)

- 1) Step on the **Auto Run** pedal to enter the auto running mode.
- 2) Step on the **Sound Active** pedal to enter the sound active mode.
- 3) Step on the **Freeze** pedal to pause the function; Step on this pedal again to restart operation.
- 4) Step on the **Blackout** pedal to turn off all lights and then step on it again to enter the previous mode.



Foot pedal (30267) separately available

## DMX Channels

### 3 Channels

#### Channel 1 – Red

0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

#### Channel 2 – Green

0-255	Gradual adjustment Green from 0 – 100%
-------	--

#### Channel 3 – Blue

0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

### 4 Channels

#### Channel 1 – Red

0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

#### Channel 2 – Green

0-255	Gradual adjustment Green from 0 – 100%
-------	--

#### Channel 3 – Blue

0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

#### Channel 4 – Dimmer intensity

0-255	Gradual adjustment dimmer intensity from 0-100%
-------	---

### 8 Channels

#### Channel 1 – Red

0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

#### Channel 2 – Green

0-255	Gradual adjustment Green from 0 – 100%
-------	--

#### Channel 3 – Blue

0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

#### Channel 4 – Red

0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

#### Channel 5 – Green

0-255	Gradual adjustment Green from 0 – 100%
-------	--

#### Channel 6 – Blue

0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

#### Channel 7 Strobe (Dimmer must be open )

0-255	Strobe effect, from slow to fast (0-20 flashes/sec.)
-------	--

#### Channel 8 – Dimmer intensity

0-255	Gradual adjustment dimmer intensity from 0-100%
-------	---

# 14 Channels



## Channel 1 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 2 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 3 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## Channel 4 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 5 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 6 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## Channel 7 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 8 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 9 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## Channel 10 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 11 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 12 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## Channel 13 Strobe (Dimmer must be open )

0-255	Strobe effect, from slow to fast (0-20 flashes/sec.)
-------	--

## Channel 14 – Dimmer intensity

0-255	Gradual adjustment dimmer intensity from 0-100%
-------	---

## 2 Channels



### Channel 1 – Colors / Programs

0-9	No Function
10-19	Red
20-29	Yellow
30-39	Green
40-49	Cyan
50-59	Blue
60-69	Purple
70-79	White
80-89	Program 01
90-99	Program 02
100-109	Program 03
110-119	Program 04
120-129	Program 05
130-139	Program 06
140-149	Program 07
150-159	Program 08
160-169	Program 09
170-179	Program 10
180-189	Program 11
190-199	Program 12
200-209	Program 13
210-219	Program 14
220-229	Program 15
230-239	Program 16
240-255	Sound-controlled

**Note CH1:** When CH1 is set to 0-79, CH2 has no function.  
When CH1 is set to 80-239, CH2 controls the speed of the programs from slow to fast.  
When CH1 is set to 240-255, CH2 controls the audio sensitivity.

**Channel 2 – No function (when CH1 is set between 0-79  )**

**Channel 2 – Speed (when CH1 is set between 80-239  )**

0-255	Speed from slow to fast
-------	-------------------------

**Channel 2 – Audio Sensitivity (when CH1 is set between 240-255  )**

0-255	Audio sensitivity from less sensitive to highly sensitive
-------	---

# 15 Channels 15ch

## Channel 1 – Control / Operating Mode

0-9	RGB Mode for CH2-15
10-249	Auto Program
250-255	Sound-controlled

## Channel 2 – Master Dimmer

0-255	Gradual adjustment dimmer intensity from 0-100%
-------	---

## Channel 3 – Shutter / Strobe (Dimmer must be open )

0-9	No Function
10-255	Strobe effect, from slow to fast (0-20 flashes/sec.)

## Channel 4 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 5 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 6 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## Channel 7 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 8 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 9 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## Channel 10 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 11 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 12 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## Channel 13 – Red



0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

## Channel 14 – Green



0-255	Gradual adjustment Green from 0 – 100%
-------	--

## Channel 15 – Blue



0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

## 7 Channels

### Channel 1 – Red

0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

### Channel 2 – Green

0-255	Gradual adjustment Green from 0 – 100%
-------	--

### Channel 3 – Blue

0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

### Channel 4 – Colors / Programs

0-9	No Function
10-19	Red
20-29	Yellow
30-39	Green
40-49	Cyan
50-59	Blue
60-69	Purple
70-79	White
80-89	Program 01
90-99	Program 02
100-109	Program 03
110-119	Program 04
120-129	Program 05
130-139	Program 06
140-149	Program 07
150-159	Program 08
160-169	Program 09
170-179	Program 10
180-189	Program 11
190-199	Program 12
200-209	Program 13
210-219	Program 14
220-229	Program 15
230-239	Program 16
240-255	Sound-controlled

**Note CH5:** When CH4 is set to 0-79, CH5 has no function.  
 When CH4 is set to 80-239, CH5 controls the speed of the programs from slow to fast.  
 When CH4 is set to 240-255, CH5 controls the audio sensitivity.

**Note CH6:** When CH4 is set to 0-9, CH6 has no function.  
 When CH4 is set to 10-255, CH6 controls the strobe effect, from slow to fast.

### Channel 5 – No function (when CH4 is set between 0-79 )

### Channel 5 – Speed (when CH4 is set between 80-239 )

0-255	Speed from slow to fast
-------	-------------------------

### Channel 5 – Audio Sensitivity (when CH4 is set between 240-255 )

0-255	Audio sensitivity from less sensitive to highly sensitive
-------	---

**Channel 6 – No function (when CH4 is set between 0-9  )**

**Channel 6 – Strobe (when CH4 is set between 10-255  )**

0-255	Strobe effect, from slow to fast (0-20 flashes/sec.)
-------	--

**Channel 7 – Dimmer intensity**

0-255	Gradual adjustment dimmer intensity from 0-100%
-------	---

## Maintenance

The Showtec Compact Lightset requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents. Keep connections clean. Disconnect electric power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

1. All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
2. There may not be any deformations on housings, fixations and installation spots.
3. Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
4. The electric power supply cables must not show any damages or material fatigue.

## Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

1. Unplug the unit from electric power source.
2. Insert a screwdriver into the slot in the fuse cover. Gently pry up the fuse cover. The fuse will come out.
3. Remove the used fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

## Troubleshooting

### No Light

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect three potential problem areas: the power supply, the LEDs, the fuse.

1. Power supply. Check that the unit is plugged into an appropriate power supply.
2. The LEDs. Return the Compact Lightset to your Showtec dealer.
3. The fuse. Replace the fuse. See page 21 for replacing the fuse.
4. If all of the above appears to be O.K., plug the unit in again.
5. If you are unable to determine the cause of the problem, do not open the Compact Lightset, as this may damage the unit and the warranty will become void.
6. Return the device to your Showtec dealer.

## No Response to DMX

Response: Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

1. Check the DMX setting. Make sure that DMX addresses are correct.
2. Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
3. Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products ? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

Problem	Probable cause(s)	Remedy
One or more fixtures are completely dead.	No power to the fixture	<ul style="list-style-type: none"> <li>• Check that power is switched on and cables are plugged in.</li> </ul>
	Primary fuse blown.	<ul style="list-style-type: none"> <li>• Replace fuse.</li> </ul>
Fixtures reset correctly, but all respond erratically or not at all to the controller.	The controller is not connected.	<ul style="list-style-type: none"> <li>• Connect controller.</li> </ul>
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed).	<ul style="list-style-type: none"> <li>• Install a phase reversing cable between the controller and the first fixture on the link.</li> </ul>
Fixtures reset correctly, but some respond erratically or not at all to the controller.	Poor data quality	<ul style="list-style-type: none"> <li>• Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link.</li> </ul>
	Bad data link connection	<ul style="list-style-type: none"> <li>• Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.</li> </ul>
	Data link not terminated with 120 Ohm termination plug.	<ul style="list-style-type: none"> <li>• Insert termination plug in output jack of the last fixture on the link.</li> </ul>
	Incorrect addressing of the fixtures.	<ul style="list-style-type: none"> <li>• Check address setting.</li> </ul>
	One of the fixtures is defective and disturbs data transmission on the link.	<ul style="list-style-type: none"> <li>• Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together.</li> <li>• Have the defective fixture serviced by a qualified technician.</li> </ul>
	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed).	<ul style="list-style-type: none"> <li>• Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.</li> </ul>
No light	Fixture is too hot.	<ul style="list-style-type: none"> <li>• Allow fixture to cool.</li> <li>• Clean fan.</li> <li>• Make sure air vents at control panel and front lens are not blocked.</li> <li>• Turn up the air conditioning .</li> </ul>
	LEDs damaged	<ul style="list-style-type: none"> <li>• Disconnect fixture and return to your dealer.</li> </ul>
	The power supply settings do not match local AC voltage and frequency.	<ul style="list-style-type: none"> <li>• Disconnect fixture. Check settings and correct if necessary.</li> </ul>



# Product Specification

Model: Showtec Compact Lightset

Set contains: 4 LED flat Parcans, 1 Stand + bag and 1 T-bar with built-in controller

## Bag

Weight: 2,16 kg




## Stand

Max. height: 2,67 m

Min. height: 1,56 m

Weight: 3,56 kg

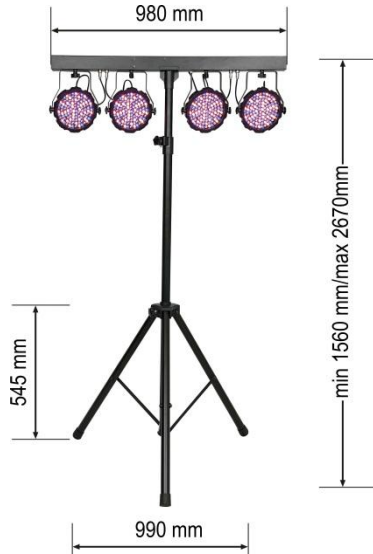

## Chase Controller + 4 Flat parcans


Voltage: 240V-50Hz (CE)

Fuse 1A / 250V

Music Control

Dimensions: 980x305x55mm (LxWxH)

Weight: 4,3 kg

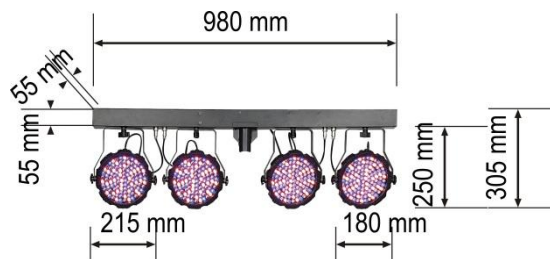

## Foot Controller (Not included ⚠)

Voltage: 240V-50Hz (CE)

Jack plug to connect to T-bar with controller

Cable length 5m

Dimensions: 500x153x54mm (LxWxH)


Weight: 1,6 kg



## Minimum distance:

Minimum distance from flammable surfaces: 0.5m

Minimum distance to lighted object: 1.3m

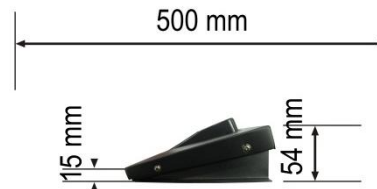

Design and product specifications are subject to change without prior notice.



Website: [www.Showtec.info](http://www.Showtec.info)

Email: [service@highlite.nl](mailto:service@highlite.nl)



© 2013 Showtec.